




## Starting the Rotax 912iS injection engine in the Foxbat

**First** – complete daily and pre-flight checks. **NB**> Open only one fuel tank valve!

**Next** – switch on the battery master cut out (RED) key on pilot seat front and set the throttle to idle position.

**Then** –

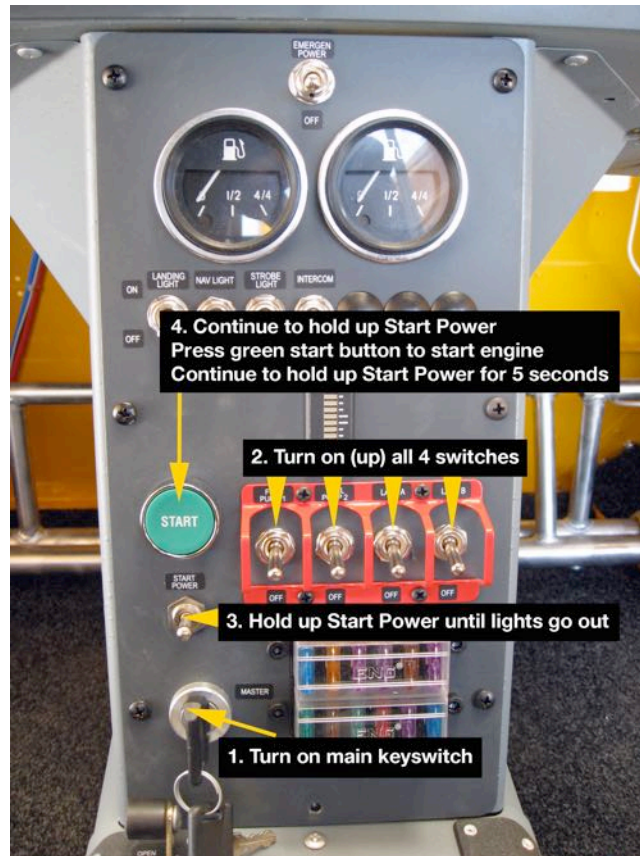

- ① Turn on the main switch – powers only the instruments
- ② Turn on Fuel Pump A & B and Lane A & B – everything is now LIVE
- ③ Hold UP the spring switch ‘START POWER’ (under ‘START’ button)
  - Fuel pumps should be heard working & fuel pressure should be increasing
  - Engine diagnostic is starting, continue to hold ‘START POWER’ switch UP
  - Wait for two RED LAMPS on top LH panel to go OUT
  - Continue to hold up ‘START POWER’ switch
- ④ Press ‘START’ button to start engine
  - Continue to hold up ‘START POWER’ switch for 5 seconds after engine start
  - Throttle to 2000 rpm for 2 minutes
  - Throttle to 3000 to check battery charge
  - Throttle to 2500 rpm to warm engine to 50°C
  - Throttle to check idle – minimum 1,400 rpm then set to 1800-2200 rpm

**PTO >>>**



## Foxbat Australia

Foxbat Australia Pty Ltd, PO Box 237, Black Rock, Victoria 3193, Australia  
[www.foxbat.com.au](http://www.foxbat.com.au) 03 9592 3101 (landline) 0413 900 892 (mobile/cell)

### **Rotax 912iS shut down and other information**

#### **Engine shut down**

DO NOT shut down engine for at least 5 minutes after landing!

Throttle – idle 1,400 rpm minimum

Fuel pump A – OFF

Fuel pump B – OFF

Lane B – OFF

Lane A – OFF

Switch off master key-switch

Switch off RED battery master

**NB> Engine cannot be stopped by switching off master or battery switch!**

#### **Other important information**

##### **DO NOT**

- fly with both tanks open!
- run down to an empty tank – engine restart takes minutes!
- switch on fuel pumps with both tanks closed!
- close both tanks with the engine running!

**PTO >>**